
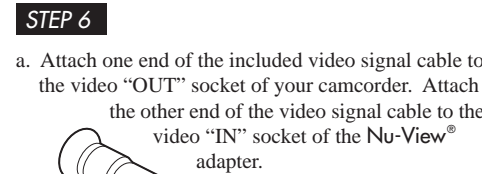
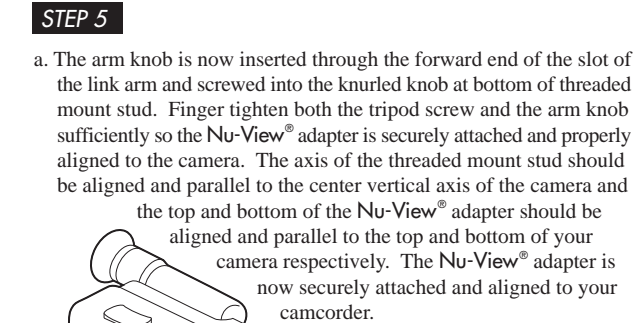
 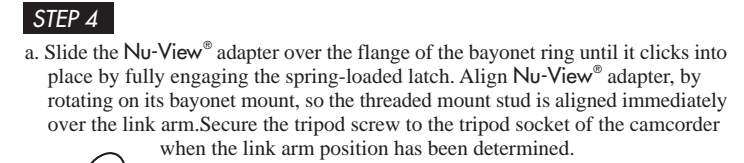
 

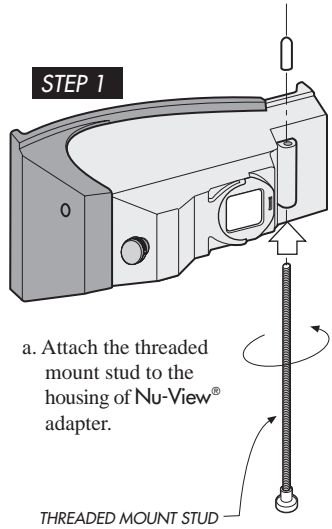



# QUICK START CARD

## Attaching the Nu-View® Adapter to your Camcorder:

DETERMINE IF THE NU-VIEW ADAPTER WILL BE MOUNTED ON THE RIGHT OR LEFT OF YOUR CAMCORDER. THIS WILL DETERMINE WHICH PART OF THE ADAPTER WILL BE UPRIGHT.

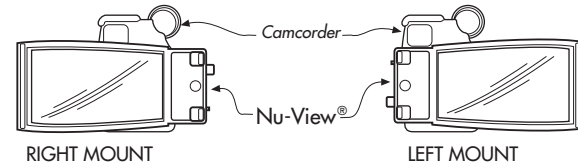


## Orientation Switch and Battery Installation:

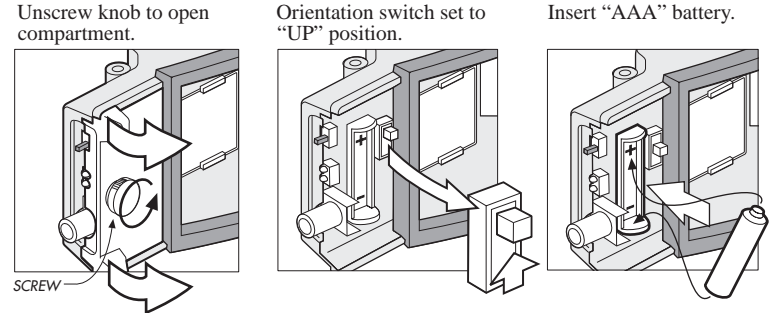

## Indicator Light Switch:

- Off/on light flashes green momentarily when off/on switch is turned on and battery is in good condition.
- Off/on light stays green when an active video signal is sensed by the circuitry.

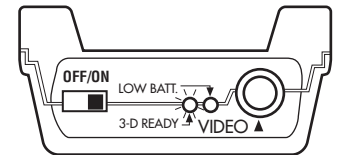

OFF ← → ON