



## *Battery Replacement*

A Flat tip screwdriver is recommended when replacing the batteries in the wireless X-Force 3D Glasses:



Insert the tip of the Screwdriver into the battery compartment as pictured:



Then move your hand closer to the tip of the screwdriver and pull up changing from the left to right slot. Once the battery compartment is loose then use your hands to remove the battery compartment from the glasses by gently rocking it back and forth.

It is recommended to use two brand new CR-2032 brand name batteries (such as Sony or Energizer) which are available inexpensively from X-Force 3D or from other internet stores.