



Ultimate3DHeaven.com

Thanks so much for your purchase of the Ultimate3DHeaven DLP Link ultra clear wireless 3D glasses!



DLP LINK

These glasses were designed for use with any DLP Link compatible Device including DLP Link Projectors and DLP Link televisions. No Transmitter is required. If you need assistance with a DLP Link setup please feel free to contact us for details at:


Info@Ultimate3DHeaven.com

These high quality Ultra Clear 3D Glasses require no maintenance other than occasional replacement of the CR2032 battery which is available for purchase from:

3D Heaven Ultra-clear 3D Glasses usage and maintenance



To activate the 3D glasses simply press the activation button in inside of the left temple with the glasses pointing towards your 3D television or 3D transmitter. To turn them off simply put the glasses back inside of the 3D glasses cleaning/storage case.

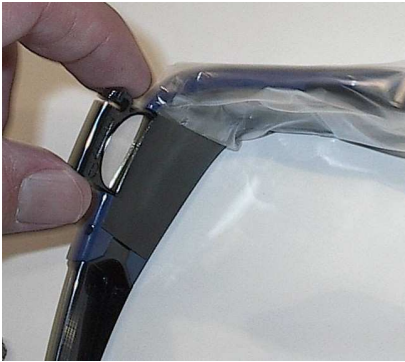

The CR2032 battery typically lasts around 100-200 hours and is very easy to replace as pictured.

Under normal operating conditions, electronic 3D glasses are perfectly safe to use for any duration you would normally view 3D images on your screen. However, some people may experience discomfort that could signal problems with the hardware, software and/or physical problem with your visual system. Discontinue use of the electronic 3D glasses and consult a physician if you experience any of the following: headache, eyestrain, blurry vision, double vision, involuntary movements, eye or muscle twitching, confusion, loss of awareness of your surroundings, dizziness or disorientation. To minimize the potential for any of the above symptoms to arise, adjust the ambient lights darker.

EPILEPSY WARNING: IF YOU OR ANY MEMBER OF YOUR FAMILY HAS A HISTORY OF EPILIPSY OR OTHER SEIZURE DISORDER, CONSULT A PHYSICIAN BEFORE USING THIS OR ANY OTHER 3D PRODUCTS.